

User Manual

MP 11 Media Player



Safety instructions

When using this electronic device, basic precautions should always be taken, including the following:

- 1 Read all instructions before using the product.
- 2 Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, in a wet basement or near a swimming pool etc).
- 3 Use this device when you are sure that amplifier has a stable base and it is fixed securely.
- 4 This product, in combination with loudspeakers and amplifier may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult with otorhinolaryngologists.
- 5 The product should be located away from heat sources such as radiators, heat vents, or other devices that produce heat.
- 6 The product should be connected to a power supply that is described in the operating instructions or are marked on the product.

- 7 The power supply should be undamaged and never share an outlet or extension cord with other devices. Never leave device plugged into the outlet when it is not being used for a long period of time.
- 8 Care should be taken that objects do not fall into liquids and liquids would not be spilled on the device.
- 9 The product should be serviced by qualified service personnel if:
 - The power supply or the plug has been damaged.
 - Objects have fallen into or liquid has been spilled on the product.
 - The product has been exposed to rain.
 - The product has been dropped or the enclosure damaged.
- 10 There are some areas with high voltage inside, to reduce the risk of electric shock do not remove cover of the microphone receiver or power supply. The cover should be removed by the qualified personnel only.

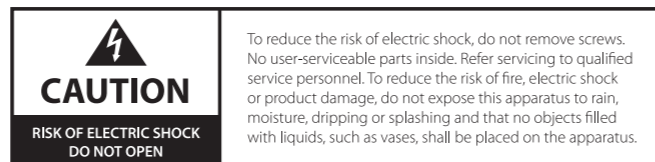


Table of contents

Before you start

Introduction.....	2
Features.....	2

Operation

Front/rear panel of MP 11	3
Front/rear panel of MP 11 operation.....	4
Media player operation.....	5
Remote control functions.....	6

Specifications

General specifications.....	7
-----------------------------	---

Before you start


MP 11 is a media player with FM and Bluetooth audio receivers. Plays audio files from SD card and USB drive. Volume and tone control. Mic input available for paging, providing gain and tone control, phantom power and signal priority. External audio sources can be connected using stereo line input or 3,5 mm TRS AUX input on the front panel.

FEATURES

- Compressed audio playback
- Supports up to 32 GB USB flash and SD cards
- Media player with SD/USB reader, FM radio and Bluetooth audio interface
- IR remote control
- RCA stereo line input
- 3.5 mm plug AUX input
- Balanced stereo Phoenix output
- Stereo RCA AUX input


Operation

Front Panel | MP 11

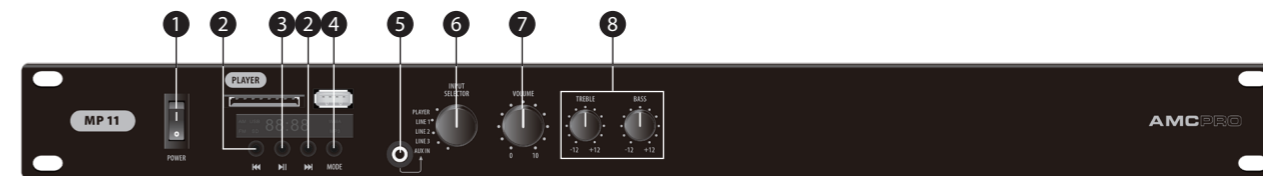 

1. Power switch | 2. Track skip buttons | 3. Play/Pause | 4. Media player mode | 5. AUX input | 6. Output source selector
7. Output volume control | 8. Output tone controls

Rear Panel | MP 11

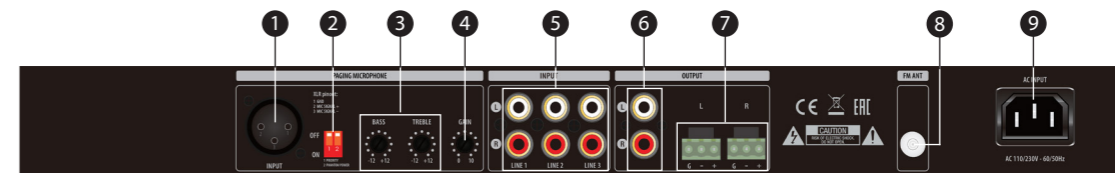 

1. XLR input for paging microphone | 2. Priority and phantom power dip-switches | 3. Microphone tone controls | 4. Microphone gain
5. Stereo RCA inputs | 6. Stereo RCA outputs | 7. Stereo balanced Phoenix outputs | 8. FM antenna connector | 9. Mains power connector

Operation

Front panel

POWER SWITCH

Switch MP 11 power ON / OFF.

SD / USB SLOTS

Media player supports up to 32 GB flash storage.

LED SCREEN

LED screen displays main information about media player status: track number and playing time, media player volume level.

PLAY/PAUSE

Start or pause player.

TRACK SKIP BUTTONS

Short press of track skip buttons will change currently playing track to previous or next track. Long press will adjust media player volume.

MODE

Change media player source between SD / USB / FM radio / Bluetooth.

INPUT SELECTOR

Select audio source for output.

AUX INPUT

3.5 mm jack connector for external audio source.

VOLUME CONTROL

Rotary knob for adjusting output level.

BASS & TREBLE TONE CONTROLS

Tone controls provide attenuation of bass and treble response. The flat position is obtained when the knobs are set to the middle. Turn the knob clockwise to raise tone level +12 dB; turn counter-clockwise to lower tone level by -12 dB

Rear panel functions

PAGING MICROPHONE INPUT

XLR connector for paging microphone.

PRIORITY AND PHANTOM POWER SWITCH

Set paging microphone input priority for output. When using condenser microphones, switch ON phantom power.

MICROPHONE GAIN AND TONE CONTROLS

Adjust paging microphone sensitivity, bass and treble response.

OUTPUT CONNECTORS

Balanced Phoenix connectors in parallel to stereo RCA for connecting MP 11 to the amplifier.

LINE INPUTS

Stereo RCA connector for external sound sources.

FM ANTENNA

FM radio antenna connector.

MAINS POWER INPUT

Connect device to mains power supply using provided power cable.

Media Player Operation



FM RADIO

AUTO-SEARCH RADIO STATIONS

Press PLAY button on front panel to automatically search all available radio stations. Stations are stored in presets.

NAVIGATING PRESETS

After auto-search, press track skip buttons on the front panel to navigate between stored station presets. Remote control numeric keypad also can be used to navigate stored presets.

MANUALLY STORE RADIO STATION PRESET

Short press play button - LCD screen now blinks FM frequency. Enter FM frequency using numeric keypad or track skip buttons. Press play to confirm frequency - LCD screen now blinks FM preset number. Choose new preset number using numeric keypad or track skip buttons. Press play button to confirm and save.

SD / USB PLAYER

PLAYING MEDIA FROM SD / USB

Press PLAY button to play or pause player. Press track skip buttons to select next or previous track. Press REP button on the remote to repeat ONE track, or ALL tracks.

BLUETOOTH

PAIRING

In Bluetooth mode, MP 11 becomes ready to pair with another devices. When no device is connected, screen blinks word BLUE. Search for "AMC Player" on your device. When connected, screen stops blinking and confirmation sound is played. Next time MP 11 will automatically connect to your device when Bluetooth mode is selected.

UNPAIRING


Press and hold PLAY button on the front panel for a player that needs to be unpaired from Bluetooth device.

CONTROL

Use track skip and PLAY buttons to select track and start/pause playing on your connected Bluetooth device. This function may not work on every device

Operation

Remote control

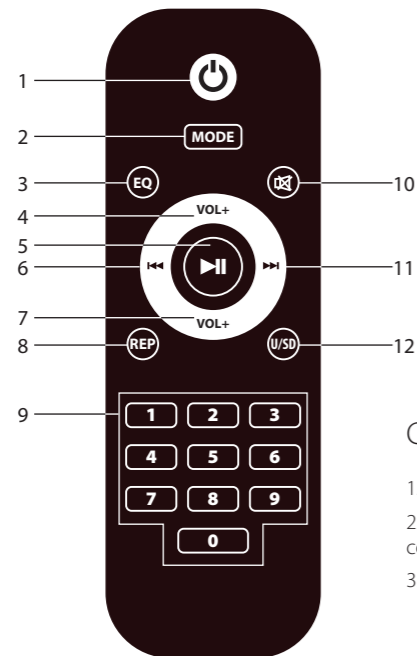

Changing batteries

1. Open the battery cover on the back of the remote control.
2. Insert two AAA batteries as marked inside the remote control battery compartment.
3. Close the battery cover.

1. Media player power ON / OFF | 2. Player mode select | 3. Equalizer | 4. Player volume up | 5. Play / pause | 6. Track skip backward button | 7. Player volume down | 8. Repeat button | 9. Numeric keypad | 10. Mute player | 11. Track skip forward button | 12. USB/SD card mode

General Specifications

MP 11

Power consumption	10 W
Power supply	115 V or 230 V, 50/60 Hz
Output level	Balanced Phoenix: 6 dBu Unbalanced RCA: 0 dBu
Microphone input	Sensitivity: 56 dBu, impedance: 600 Ω
Line input	Sensitivity: 0 dBu, impedance: 4,7 kΩ
Aux input	Sensitivity: 0 dBu, impedance: 4,7 kΩ
Phantom power	+48 V
Media player	Radio station memory: 32 stations Max. USB flash or SD card size: 32 GB
Antennas	FM antenna: monopole BNC connector, Bluetooth antenna: internal, working distance > 10 m
Frequency response	20 Hz – 20 kHz
THD	0.10 %
Tone control	Bass: 100 Hz ±12 dB; Treble: 10 kHz ±12 dB
Remote control	IR remote
Dimensions	483 mm × 103 mm × 44 mm
Weight	1.7 kg

The specifications are correct at the time of printing this manual. For improvement purposes, all specifications for this unit, including design and appearance, are subject to change without prior notice.